

Pod™ Petite

Back wall installation

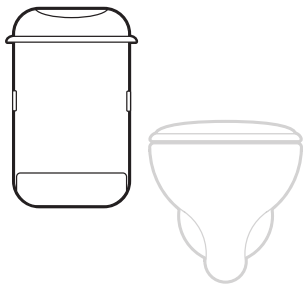


Side wall installation

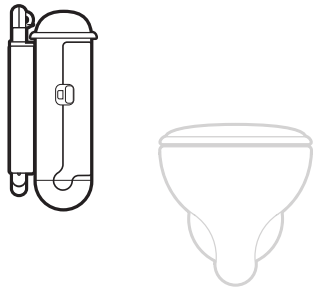


Recommended specifications

Pod™ Petite manual

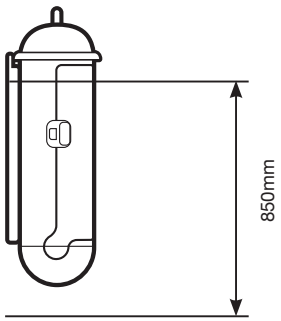


Pod™ Petite auto

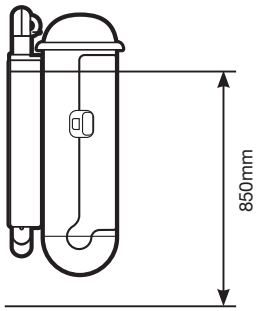



Important:


Wall bracket/sensor box wall plate should be positioned at a height of approximately 850mm above floor for best results. Secure into a wall stud. Use wall anchors if a wall stud cannot be located.

Contents

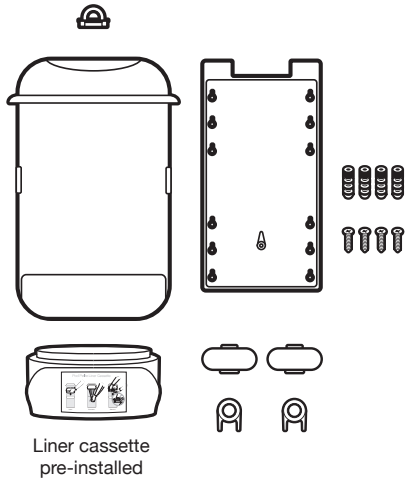

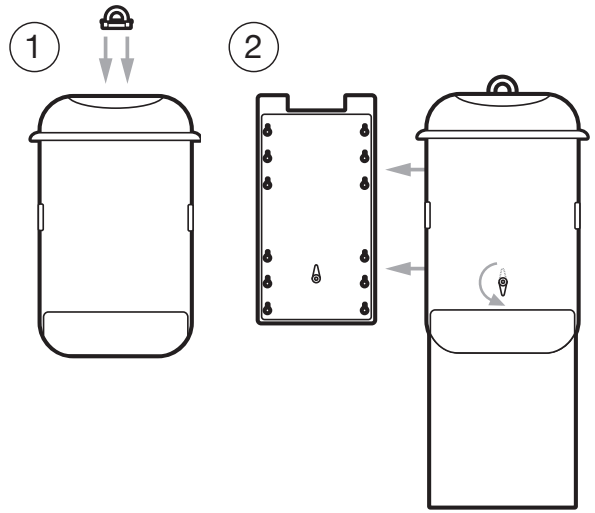


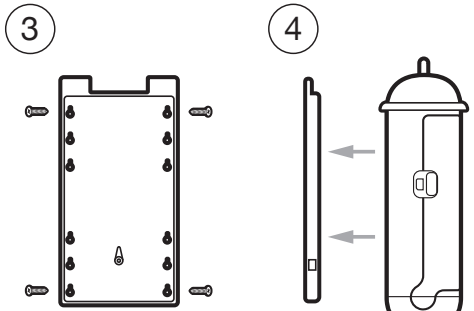


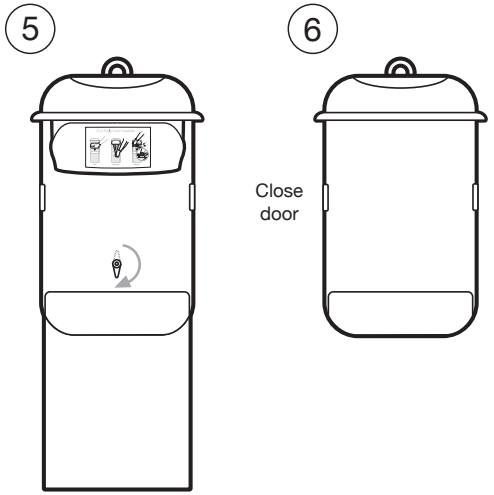


Pod™ Petite Auto – Installation Instructions


Contents

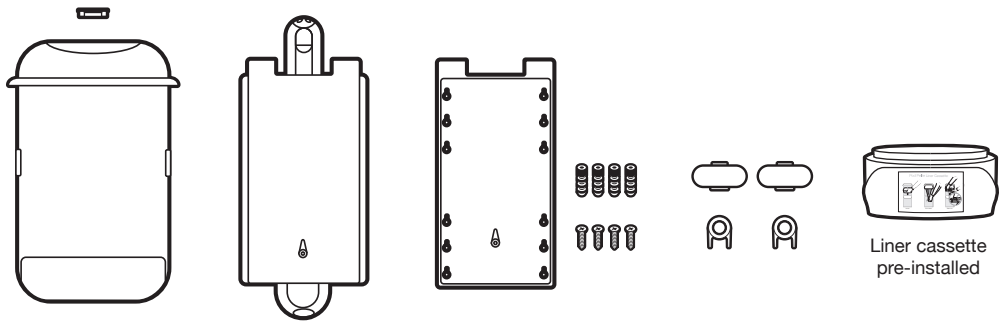

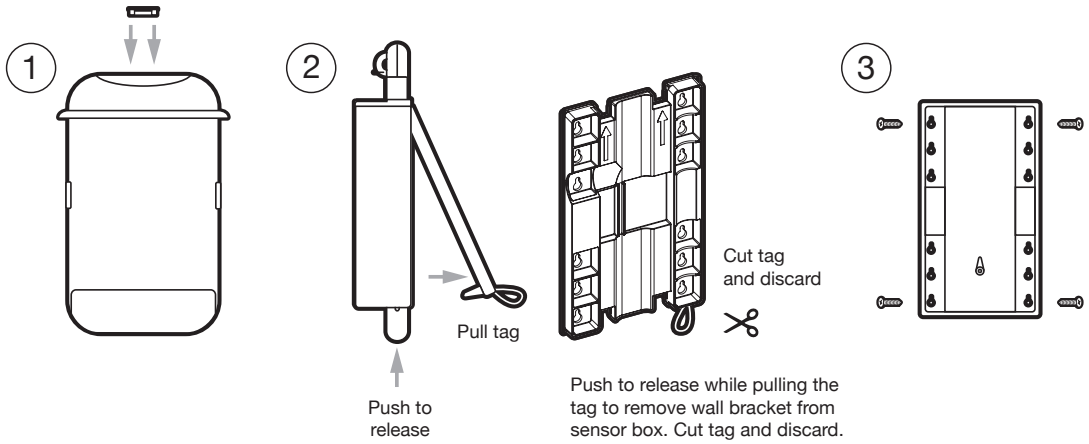

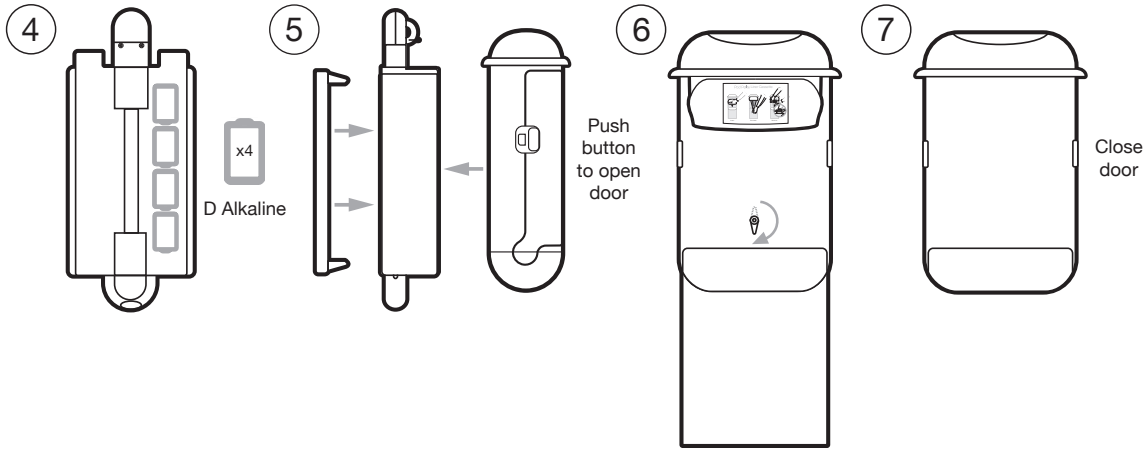


Pod™ Petite Liner Cassette – Instructions

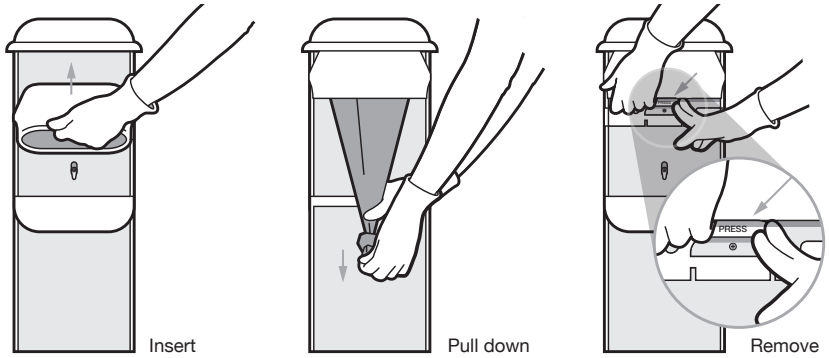

Pod™ Petite Optional Locking Feature – Instructions


Locking Cap




Key



Lock Installation

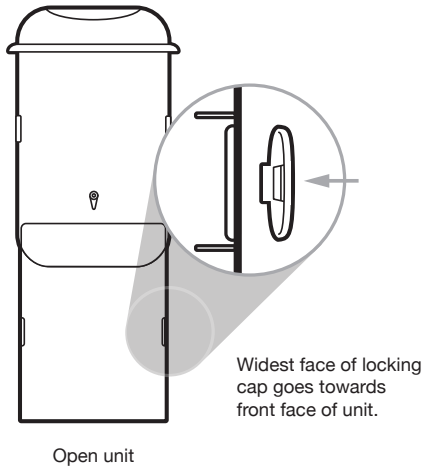

Opening locked unit

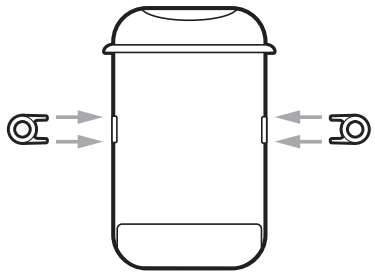

www.sanipod.com

For installation videos and support visit
http://www.sanipod.com/tools-and-support/