
Quick, simple 3 step service process

1 Open door, tear off liner and remove waste

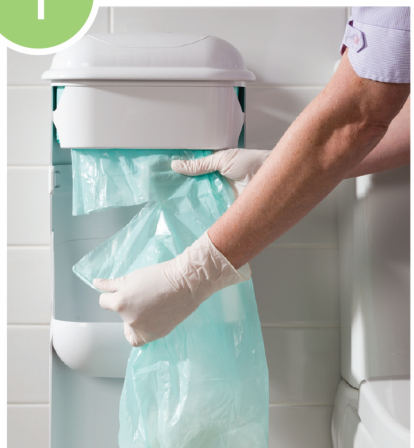

2 Pull down new liner and tie a knot



3 Tuck liner into cavity and close door

