INSTALLATION INSTRUCTIONS

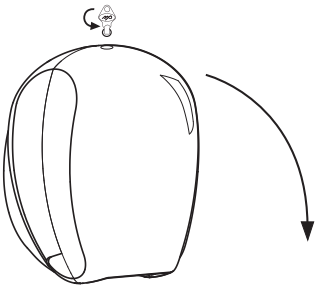

1) Open dispenser with the Key

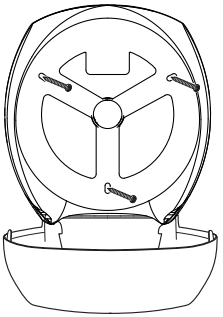

2) Fix dispenser on the wall with screws-kit

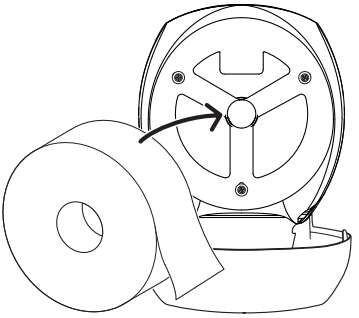

3) Insert the toilet roll.
If necessary use the core adaptor (a).

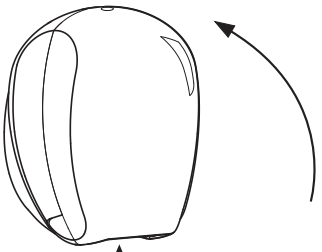

4) Close dispenser

Recommended
mounting height
500 to 700 mm

mar plast